



**JUPITER AVIONICS**  
C O R P O R A T I O N

**JA77-006**

**Switch Plate with Dual Removable Legends -  
Six Dzus**



**Installation and Operating Manual**

**Rev B**

**Jupiter Avionics Corporation**  
1959 Kirschner Road  
Kelowna BC  
Canada V1Y 4N7  
Tel: +1 778 478 2232  
Toll-Free: 1 855 478 2232  
[www.jupiteravionics.com](http://www.jupiteravionics.com)

**Copyright 2022 Jupiter Avionics Corp.**



**All rights reserved**

Jupiter Avionics Corporation (JAC) permits a single copy of this manual to be printed or downloaded for the express use of an installing agency. Any such electronic or printed copy of this manual must contain the complete text of this copyright notice. Any unauthorized commercial distribution of this manual is strictly prohibited. Except as described above, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded, or stored in any storage medium for any purpose without the express prior written consent of JAC.

**IMPORTANT:**

Information in this document is subject to change without notice.  
To confirm the current revision status of this manual, visit the JAC website:  
[www.jupiteravionics.com](http://www.jupiteravionics.com)

[illegible]

Prepared:	Checked:	Approved:
DGB/MPB		



## Table of Contents

<b>SECTION 1 - DESCRIPTION .....</b>	<b>1</b>
1.1 System Overview .....	1
1.2 Features Overview .....	1
1.3 Inputs and Outputs .....	1
1.3.1 Inputs .....	1
1.4 Specifications .....	1
1.4.1 Electrical Specifications .....	1
1.4.2 Mechanical Specifications .....	1
<b>SECTION 2 – INSTALLATION .....</b>	<b>2</b>
2.1 Introduction .....	2
2.2 Continued Airworthiness .....	2
2.3 Unpacking and Inspecting Equipment .....	2
2.3.1 Warranty .....	2
2.4 Installation Procedures .....	2
2.4.1 Installation Limitations .....	2
2.4.2 Cabling and Wiring .....	2
2.4.3 Mechanical Installation .....	3
2.4.4 Legend Replacement .....	3
2.4.5 Legend Text Selection .....	3
2.5 Post Installation Checks .....	3
2.6 Installation Kit .....	3
2.6.1 Recommended Crimp tool .....	3
2.7 Installation Drawings .....	3
<b>SECTION 3 – OPERATION .....</b>	<b>4</b>
3.1 Introduction .....	4
3.2 Front Panel Controls .....	4
3.3 Operation .....	4
<b>Appendix A - Installation Drawings .....</b>	<b>A1</b>
A1 Introduction .....	A1
A2 Installation Drawings .....	A1
<b>Appendix B - Installation Documents .....</b>	<b>B1</b>
B1 Airworthiness Approval .....	B2
B2 Instructions for Continued Airworthiness .....	B2

# JA77-006 Switch Plate with Dual Removable Legends - Six Dzuses

## SECTION 1 - DESCRIPTION

### 1.1 System Overview

The JA77-006 Switch Plate with Dual Removable Legends - Six Dzuses allows the aircraft installing agency to present a professionally finished configurable switch panel for the required switches.

The JA77-006 accepts standard aircraft-grade toggle switches (i.e. Honeywell TL series or MS24523).

The legends are removable and available with any text or font. Blank legends and hole plugs (JAC Part No PLT-PLUG-0003) are also available to cover unused switch holes.

### 1.2 Features Overview

The JA77-006 has accommodation for up to four toggle switches.

The JA77-006 has four field-replaceable legends per switch port.

Each legend is fully dimmable from a +28 Vdc light dimmer bus.

Up to eight characters are available per legend.

The Dzus plate has a baked-on flat urethane paint finish to resist scratches and nicks.

### 1.3 Inputs and Outputs

Refer to the JA77-006 [connector maps](#) for the mating connector designators and pin assignments for the input and output signals.

#### 1.3.1 Inputs

Name	Qty	Type
Power input	1	+28 Vdc lights power

### 1.4 Specifications

#### 1.4.1 Electrical Specifications

##### Lights Input

LIGHTS INPUT Voltage	0 - 28 Vdc
LIGHTS INPUT Current	150 mA max.

#### 1.4.2 Mechanical Specifications

Height	2.25 in [57.2 mm] max
Depth behind faceplate	0.32 in [8.1 mm] max
Faceplate width	5.75 in [146 mm] max
Weight without switches	0.33 lbs. [0.15 kg] max brushed
Material	aluminum with flat black urethane finish
Connector	One 2-pin male Microfit
Mounting	4 Dzus fasteners
Installation kit part number	INST-JA77

## **JA77-006 Switch Plate with Dual Removable Legends - Six Dzus**

### **SECTION 2 – INSTALLATION**

#### **2.1 Introduction**

This section contains unpacking and inspection procedures, installation information, and post-installation checks.

#### **2.2 Continued Airworthiness**

Maintenance of the JA77-006 is on condition only. Scheduled inspection and/or periodic maintenance of this unit is not required.

#### **2.3 Unpacking and Inspecting Equipment**

Unpack the equipment carefully. Check for shipping damage and report any problems to the relevant carrier. Confirm that the Authorized Release Certificate or Certificate of Conformance is included. Complete the on-line warranty card from the Jupiter Avionics Corporation (JAC) website – [www.jupiteravionics.com/warranty](http://www.jupiteravionics.com/warranty)

##### **2.3.1 Warranty**

This product manufactured by JAC is warranted to be free of defects in workmanship or performance for 2 years from the date of installation by an approved JAC dealer or agency. This warranty covers the cost of all materials and labour to repair or replace the unit, but does not include the cost of transporting the defective unit to and from JAC or its designated warranty repair centre, or of removing and replacing the defective unit in the aircraft. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alteration or repairs.

THIS WARRANTY IS VOID IF THE PRODUCT IS NOT INSTALLED BY AN AUTHORIZED JAC DEALER. If the on-line warranty card is not completed, the product will be warranted from the date of manufacture.

Contact JAC for return authorization, and for any questions regarding this warranty and how it applies to your unit(s). JAC is the final arbiter concerning warranty issues.

#### **2.4 Installation Procedures**



---

**CAUTION:** The power input circuitry of the unit may be damaged if the installation does not conform to the wiring instructions in this manual.

---

##### **2.4.1 Installation Limitations**

Those installing the JA77, on or in a specific type or class of aircraft, must determine that the aircraft installation conditions are within standards. The JA77 may be installed only by following the applicable airworthiness requirements.

##### **2.4.2 Cabling and Wiring**

All wire shall be selected in accordance with the original aircraft manufacturer's maintenance instructions, or AC43.13-1B Change 1, Paragraphs 11-76 through 11-78. Unshielded wire types shall qualify to MIL-W-22759 as specified in AC43.13-1B Change 1, Paragraphs 11-85, 11-86, and listed in Table 11-11. Follow the Connector Map and Interconnect in Appendix A of this manual.

Maintain wire segregation and route wiring in accordance with the original aircraft manufacturer's maintenance instructions.



Unless otherwise noted, lights wiring shall be a minimum of 22 AWG. Refer to the Interconnect drawing for additional specifications. Check that the ground connection is clean and well secured.

### 2.4.3 Mechanical Installation

The JA77-006 can be mounted in any attitude and location with adequate space for the front panel and sufficient clearance for the connector and wiring harness. It requires no direct cooling.

### 2.4.4 Legend Replacement

The JA77-006 illuminated legends are field replaceable. For further information, refer to the '[Legend Replacement](#)' document in Appendix A of this manual.

### 2.4.5 Legend Text Selection

When ordering a JA77-006, use the Configuration Chart on the [JAC website](#), or [DOC-CONF-77x06](#) in Appendix A of this manual to specify the text for each legend. Complete the chart and include it with the order.

## 2.5 Post Installation Checks

### 2.5.1 Voltage/Resistance checks.

Do not attach this unit until the following conditions are met:

- a) Check P9 pin 1 for +28 Vdc lights buss voltage.
- b) Check P9 pin 2 for continuity to ground (less than 0.5  $\Omega$ ).

### 2.5.2 Configuration

Ensure that any switches inserted into the JA77-006 are configured correctly. This may be done at the factory, on the maintenance bench or in the aircraft before the power on checks are performed.

### 2.5.3 Power on Checks.

Power up the aircraft's systems and confirm normal operation of all functions controlled by the JA77 switches.

When all performance checks are satisfied, complete the necessary regulatory documentation before releasing the aircraft for service. Refer to [Appendix B](#).

## 2.6 Installation Kit

The kit required to install this unit is included with the unit.

The installation kit (Part # INST-JA77) consists of the following:

Quantity	Description	JAC Part #
1	Connector Assembly	CON-8500-0001
2	Female crimp pins	CON-8501-0001

### 2.6.1 Recommended Crimp tool

Micro-Fit Crimp Tool	
Tool Type	Hand crimping tool
MOLEX	63819-0000

## 2.7 Installation Drawings

The drawings and documents required for Installation can be found in [Appendix A](#) of this manual.



## JA77-006 Switch Plate with Dual Removable Legends - Six Dzuses

### SECTION 3 – OPERATION


#### 3.1 Introduction

This section contains the operating instructions for the JA77-006.

#### 3.2 Front Panel Controls



**Note:** The sixteen legends are removable and may be replaced with custom-ordered parts with any text or font.

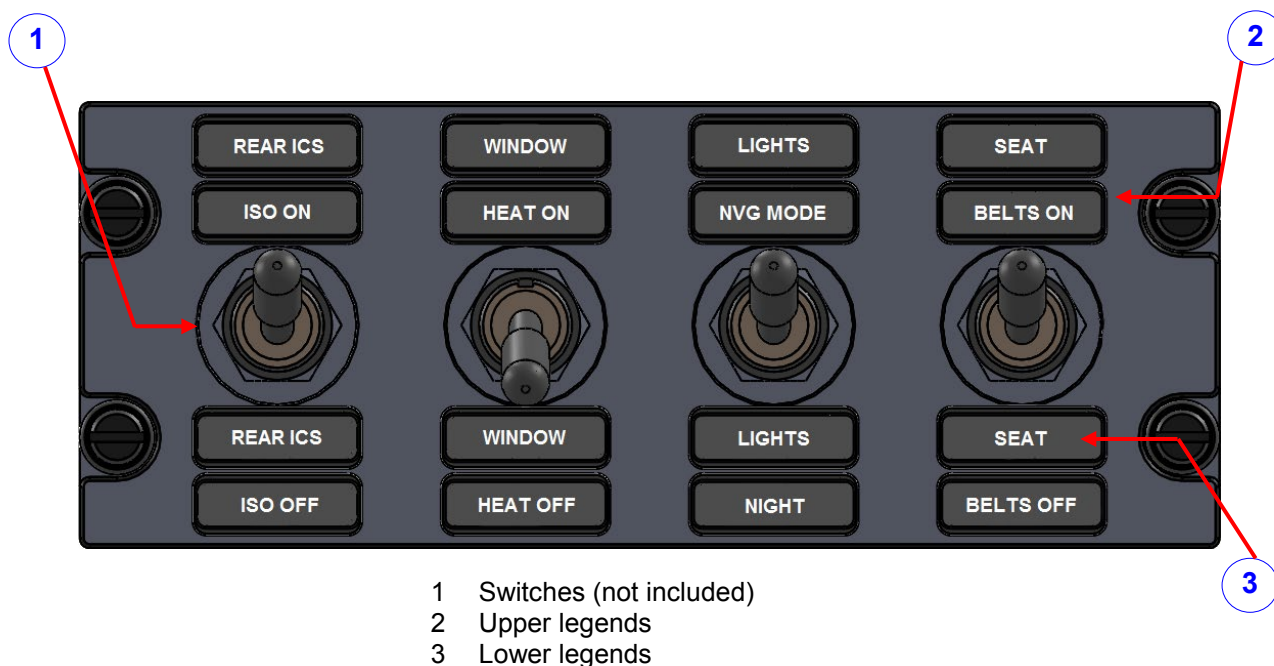

The JA77-006 allows the aircraft customizer to present a professionally-finished configurable switch panel for extra switches. The JA77 accepts standard aircraft grade toggle switches (i.e. Honeywell TL series or MS24523).

Blank legends and hole plugs are also available to cover unused switch holes.

#### 3.3 Operation



**Note:** Check with your installing agency for confirmation of the operation of all switches.

Each switch position is associated with four replaceable legends; two above and two below the switch. The legends will dim with the aircraft lighting buss.



# Installation and Operating Manual

## Appendix A - Installation Drawings

### **A1 Introduction**

The drawings necessary for installation and troubleshooting of the JA77-006 Switch Plate with Dual Removable Legends - Six Dzus are in this Appendix, as listed below.

### **A2 Installation Drawings**


DOCUMENT	Rev
<a href="#">JA77-006 Connector Map</a>	<a href="#">A</a>
<a href="#">JA77-006 Interconnect</a>	<a href="#">A</a>
<a href="#">JA77-006 Mechanical Installation</a>	<a href="#">A</a>
<a href="#">DOC-CONF-77x06</a>	<a href="#">C</a>

Reference Documents	
<a href="#">TOL-CUST-8XTR Legend Replacement</a>	<a href="#">A</a>




P1

2 PIN FEMALE MICRO-FIT  
MATING CONNECTOR

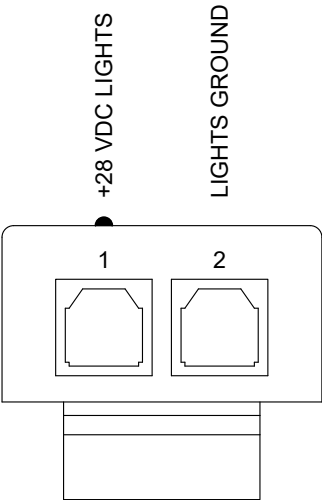

VIEW IS FROM REAR OF MATING CONNECTOR


PREPARED	TAT	<div>  <b>JUPITER AVIONICS</b>  CORPORATION </div>		
CHECKED				
APPROVED		<div> <div>TITLE</div> <div>Switch Plate with Dual Removable Legends - Six Dzus</div> </div>		
		NCAGE CODE L00N3	PART NO. JA77-006	SHEET 1/1
CONFIDENTIAL & PROPRIETARY TO JUPITER AVIONICS CORP.		<div> DOC NO.  <b>JA77-006 Connector Map Rev A.dwg</b> </div>		


JA77-006 INTERCONNECT WIRING NOTES


NOTES

1. ALL WIRE SIZE SHOULD BE 24 AWG MIN UNLESS OTHERWISE SPECIFIED. UNSHIELDED WIRE SHOULD BE SELECTED PER FAA AC43.13-1B CHANGE 1 PARA 11-76 TO 11-78. WIRE TYPES SHOULD BE IN ACCORDANCE WITH MIL-W-22759 AS DESCRIBED IN FAA AC43.13-1B CHANGE 1 PARA 11-85 AND 11-86 AND LISTED IN TABLE 11-11 OR 11-12.

2. CONNECTION TO AIRFRAME GROUND SHOULD BE MADE WITH 22 AWG WIRE. LENGTH NOT TO EXCEED 3 FT (0.91 M).

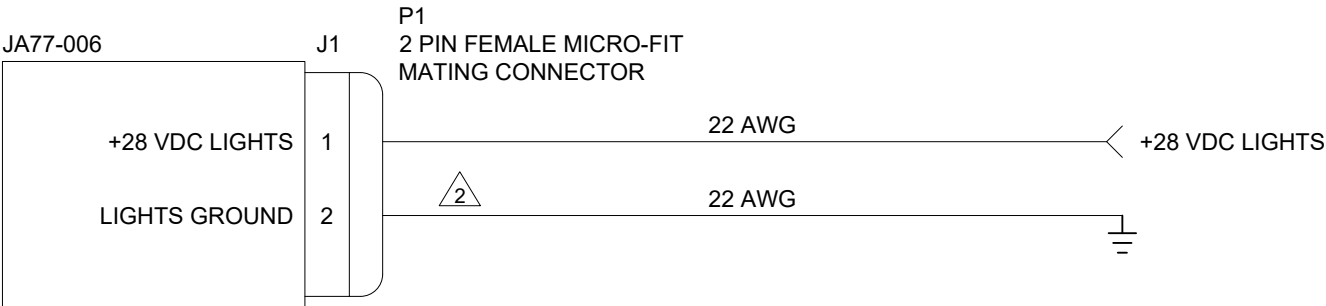


PREPARED	TAT	 <b>JUPITER AVIONICS</b> CORPORATION		
CHECKED	JAC 12-09-21 TAT			
APPROVED	JAC 09-09-22 KDV	TITLE Switch Plate with Dual Removable Legends - Six Dzus		
CONFIDENTIAL & PROPRIETARY TO JUPITER AVIONICS CORP.		NCAGE CODE L00N3	PART NO. JA77-006	SHEET 1/1
		DOC NO. JA77-006 Interconnect Rev A.dwg		

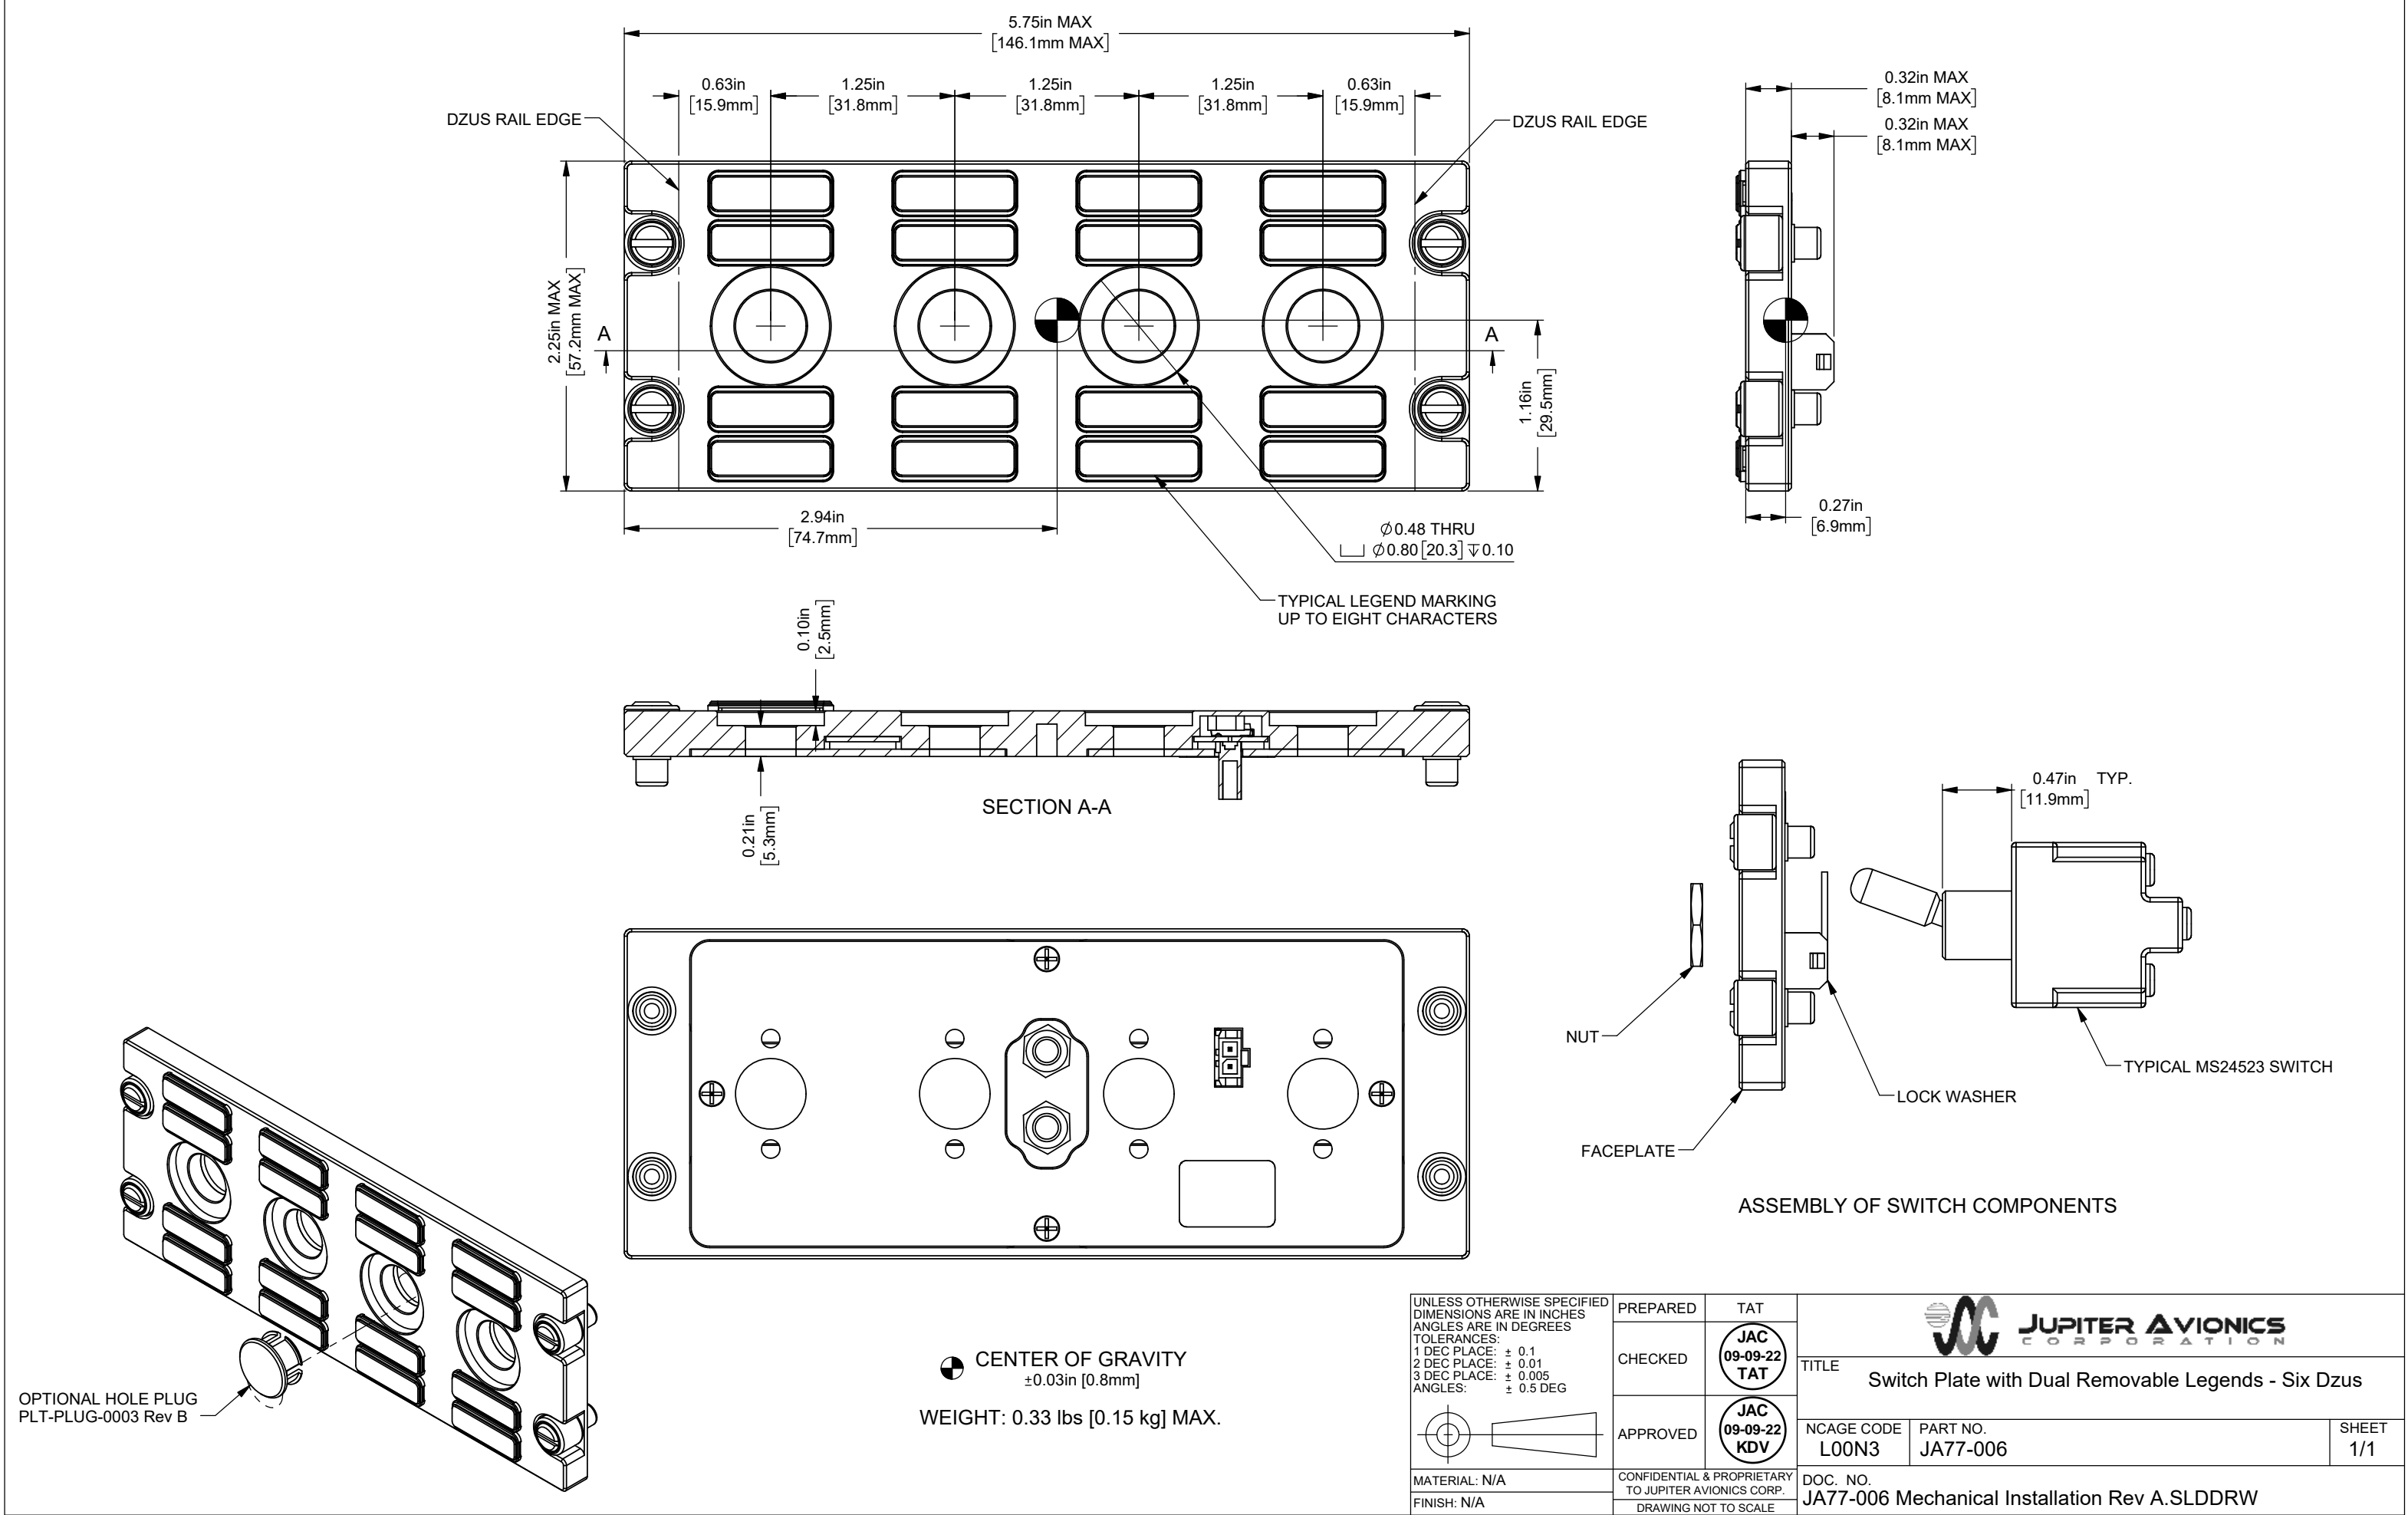



## JA77-x06 Configuration Chart

Standard legends shown, all legends are customizable up to 8 characters. Click on legend to customize. Save and email file to [sales@jupiteravionics.com](mailto:sales@jupiteravionics.com)  
Hole Plugs (JAC P/N PLT-PLUG-0003) will be provided for the holes with blank legends.

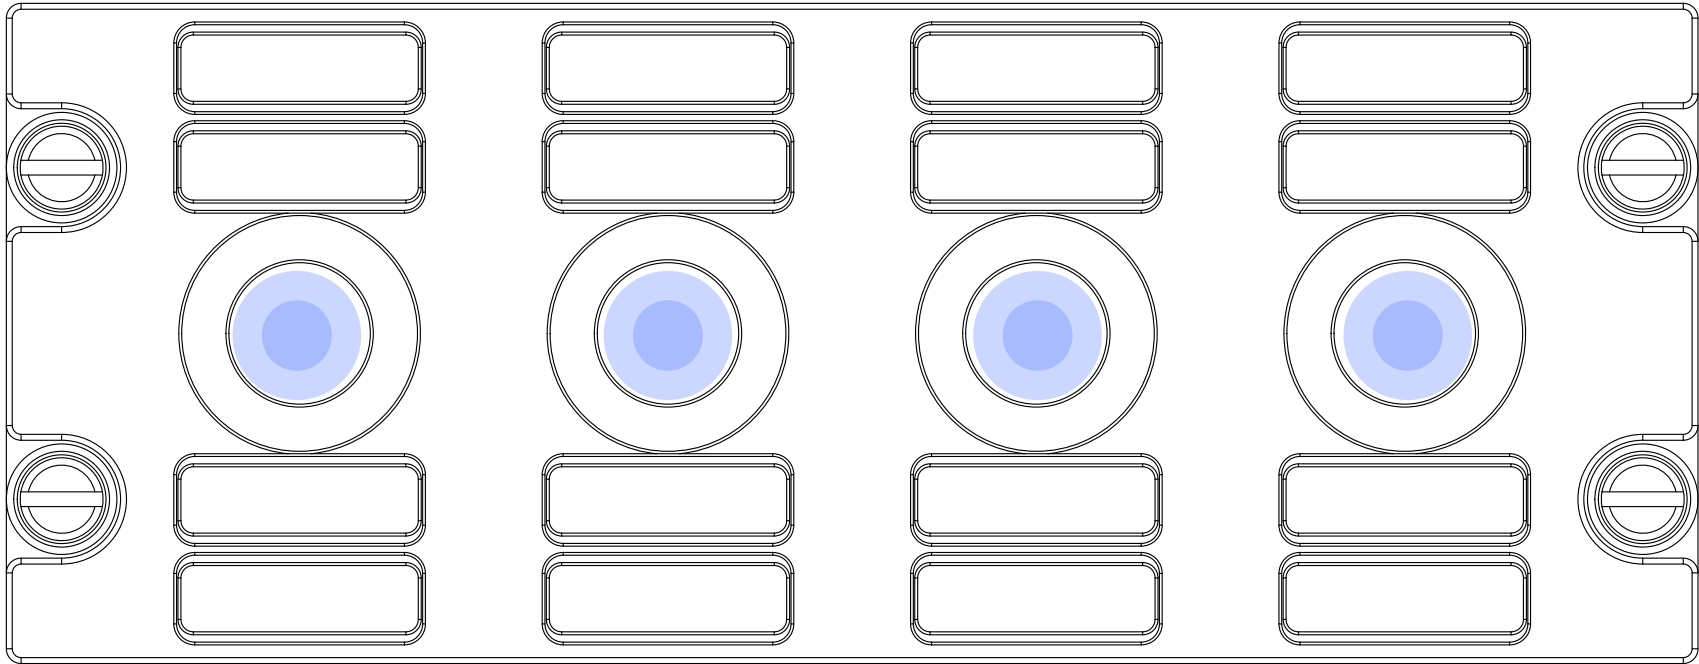

### System Lighting Type

Standard White ☐  
NVIS Compatible ☐

☐ Hole Plugs Not Installed  
☒ Hole Plugs Installed

### Customer Information

Installation Company: \_\_\_\_\_  
Phone: \_\_\_\_\_  
Contact: \_\_\_\_\_  
End User Name: \_\_\_\_\_  
Aircraft Type: \_\_\_\_\_



## Field-Replaceable Legends

Jupiter Avionics Corporation (JAC) products have field-replaceable illuminated legends. This permits easy customization, and allows the same units to be used in multiple different configurations with only minimal changes.

The internal circuitry ensures that, although the legends are individually illuminated, the illumination is consistent and uniform throughout all legends, and never needs to be balanced. This means that if it is a requirement to change the labelling due to damage or for a different project, there is no need for costly and time-consuming illumination checks.

### Legend Removal



**Caution:** Take care not to scratch or otherwise damage the faceplate or the legend.


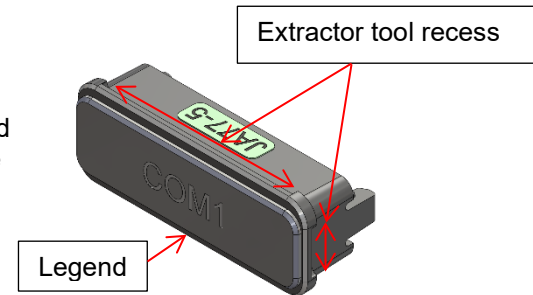


Figure 1

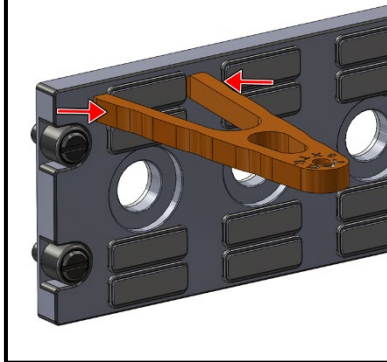

To facilitate 8 letter legend removal, JAC provides a legend extractor tool - part # TOL-CUST-8XTR (figure 1) that fits into the recesses on the legend.

±

To remove a legend, hold the extractor firmly between the forefinger and thumb, and use a tweezer-like action to grip the legend (figure 2).

Figure 2


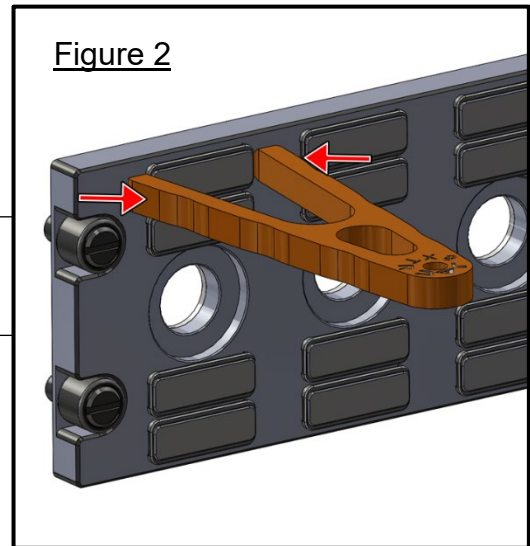


Figure 3

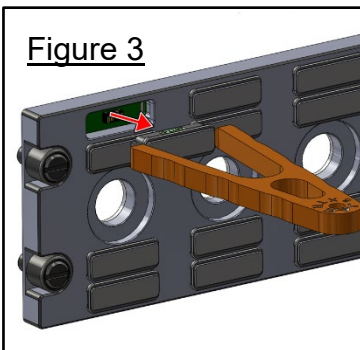

Pull the legend away from the faceplate as shown in figure 3.

### Legend Replacement

To replace a legend, align the text correctly, and then apply gentle pressure until the body of the legend support seats firmly into the faceplate.

Once the new legend is in place, ensure that it has seated correctly by checking that it illuminates. The unit is now ready for use.



## **Installation and Operating Manual**

### **Appendix B - Installation Documents**





## **B1**      **Airworthiness Approval**

Airworthiness approval of the JA77-006 may require completion of a TCCA Major Modification Report per CAR STD (AWM) 571 Appendix L, or a FAA Form 337. The sample wording for a description of the work is provided to assist the Installing Agency in preparing Instructions for Continued Airworthiness (ICA) when installing a Jupiter Avionics JA77-006 Switch Plate with Dual Removable Legends - Six Dzus. It is the installer's responsibility to determine the applicability of the method used. Installations performed outside Canada must follow the applicable aviation authority's regulations.

### **Sample Wording:**

Installed a Jupiter Avionics JA77-006 Switch Plate with Dual Removable Legends - Six Dzus in [aircraft location].

Installed in accordance with the JA77-006 Installation Manual, Revision [ ], and AC 43.13-2, Chapters 2, and 3.

The JA77-006 Installation Manual provides detailed installation instructions and wiring diagrams (Section 2, and Appendices A and B).

Aircraft equipment list, weights and balance amended. Compass compensation checked and found to conform to applicable regulations.

## **B2**      **Instructions for Continued Airworthiness**

Maintenance of the JA77-006 Switch Plate with Dual Removable Legends - Six Dzus is "on condition" only. Periodic maintenance of the JA77-006 is not required.

The following sample Instructions for Continued Airworthiness (ICA) provides assistance in preparing ICA for the Jupiter Avionics JA77-006 unit installation as part of a Type Certificate (TC) or Supplemental Type Certificate (STC) project to comply with CAR STD (AWM) 523/527/525/529.1529 or FAR 23/25/27/29.1529 "Instructions for Continued Airworthiness".

Items that may vary by aircraft make and model are shown in brackets ("[ ]") and should be filled in as appropriate. Some of the checklist items do not apply, in which case they should be marked "N/A" (Not Applicable).

## **Instructions for Continued Airworthiness, Jupiter Avionics JA77-006 Switch Plate with Dual Removable Legends - Six Dzus in an [Aircraft Make and Model]**

### **1. Introduction**

[Aircraft that has been altered: Registration number, Make, Model and Serial Number]

**Content, Scope, Purpose and Arrangement:** This document identifies the Instructions for Continued Airworthiness for a Jupiter Avionics JA77-006 installed in an [aircraft make and model].

**Applicability:** Applies to a Jupiter Avionics JA77-006 installed in an [aircraft make and model].

**Definitions/Abbreviations:** None, N/A.

**Precautions:** None, N/A.

**Units of Measurement:** None, N/A.

**Referenced Publications:** JA77-006 Installation and Operating Manual  
STC/TC # [applicable STC/TC number for the specific aircraft installation]

**Distribution:** This document should be a permanent aircraft record.



## **2. Description of the System/Alteration**

Jupiter Avionics JA77-006 Switch Plate with Dual Removable Legends - Six Dzus. Refer to Appendix A of this manual for interconnect information. Refer to aircraft manufacturer approved interconnect for actual installation.

## **3. Control, Operation Information**

Refer to section 3 of this manual.

## **4. Servicing Information**

N/A

## **5. Maintenance Instructions**

Maintenance of the JA77-006 is 'on condition' only. Periodic maintenance is not required.

## **6. Troubleshooting Information**

N/A

## **7. Removal and Replacement Information**

Refer to Section 2 of this manual - the JA77-006 Installation and Operating Manual. If the unit is removed and reinstalled, a functional check of the equipment should be conducted.

## **8. Diagrams**

Refer to Appendix A of this manual - the JA77-006 Installation and Operating Manual - for installation drawings and interconnect examples.

## **9. Special Inspection Requirements**

N/A

## **10. Application of Protective Treatments**

N/A

## **11. Data: Relative to Structural Fasteners**

JA77-006 and appropriate mounting hardware installation, removal and replacement should be in accordance with applicable provisions of AC 43.13-1B and AC 43.13-2A.

## **12. Special Tools**

N/A

## **13. This Section is for Commuter Category Aircraft Only**

A. **Electrical loads:** Refer to Section 1 of the JA77-006 Installation and Operating Manual.

B. **Methods of balancing flight controls:** N/A.

C. **Identification of primary and secondary structures:** N/A.

D. **Special repair methods applicable to the airplane:** N/A.

## **14. Overhaul Period**

No additional overhaul time limitations.

## **15. Airworthiness Limitation Section**

N/A